


-24C

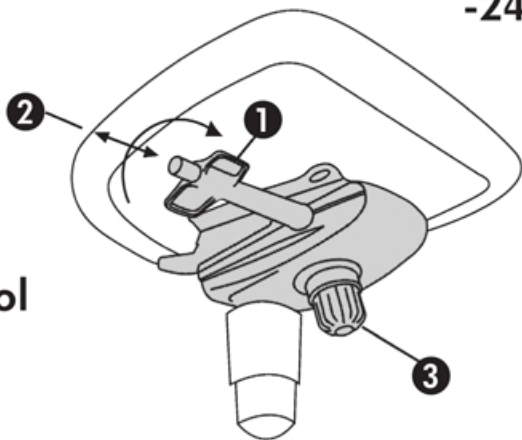

Posture Back Control

- 1 Seat Height Adjustment**- Located right center below seat. To raise the chair, lift your weight from the chair and rotate paddle clockwise. To lower, remain seated and rotate the paddle clockwise.
- 2 Five Position Back Angle Lock** - Tilt the seat back to desired angle. Push and release button to lock. To unlock back, push in and release button, lean back.
- 3 Back/Recline Tension** - From seated position, take pressure off back (lean forward) turn clockwise to tighten and counterclockwise to reduce back tension.
- 4 Seat Slide (Optional)** - Lever located right side front. Pull up on lever to adjust seat slide forward or back.